

712 - MICROWAVE CLEANER

TECHNICAL DATA SHEET | NORDICARE

Household care

NORDICARE MICROWAVE CLEANER is a water-based cleaning product for microwave ovens. It is intended for routine cleaning of microwave interiors and appliance surfaces where a neutral, ready-to-use household cleaner is preferred. The product helps remove everyday food splashes, grease residues and handling marks, leaving the microwave clean and fresh.

Key Benefits

- Water-based cleaner for microwave ovens.
- Suitable for routine removal of food splashes, light grease and everyday dirt.

Application area

For cleaning microwave ovens and similar household appliance surfaces that tolerate water-based cleaning. Suitable for routine cleaning of internal and external microwave surfaces, including areas affected by food splashes and light grease residues. Do not use on hot surfaces, electrical components, ventilation openings or surfaces where the appliance manufacturer advises against water-based cleaning. Always test on a small, inconspicuous area before full application.

Instructions

Ensure that the microwave oven is switched off, cool and empty before cleaning. Remove loose food residues before application. Apply MICROWAVE CLEANER to a soft cloth or sponge, or use according to the approved product label, and wipe the surface evenly. For dried-on residues, allow the product to work briefly before wiping. Wipe all cleaned areas with a clean damp cloth to remove product residues, then dry the surface before using the appliance again. Do not spray directly into ventilation openings, fans, controls or electrical parts, and always follow the appliance manufacturer's instructions.



Conditioning

500 ml (20 units/box)

Document control

Document no.: TDS-712

Product: Microwave Cleaner

Version: 01

Revision date: 06.08.2026

Prepared by: Technical Department

Declaration

Contains: Water, propan-2-ol, <5% cationic surfactants, <5% non-ionic surfactants and perfume.

Safety information

Keep out of reach of children.